


Inverter truth table		
Inverter pair label	Upstream	Downstream
Input connections	AC2	AC1
Charge mode	FLT	SLT
Notes	Charges whenever generator runs.	Discreet time clock starts generator during time set for pair to charge.

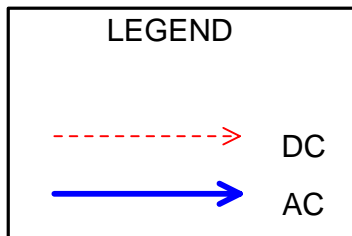

© 2006 Miller Power & Communications
 Duplication prohibited w/out written permission

Miller Power & Communications License: 773985		17395 Oak Rd. Atascadero, CA 93422 805-438-5600 Fax: 438-4607
Drawn by: W. Miller	Title:	
Date: 1/26/06	File: Cascading.vsd	
Revised: 1/26/06		
	Page: 1 of 1	