



This is the Mate. It is used to control the solar equipment:




1. To Inverter On or Off: Press the button labeled INV. You should see a screen such as this.

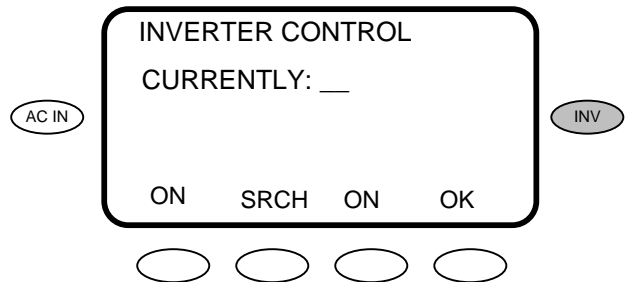

2. To turn inverter ON, press button under ON

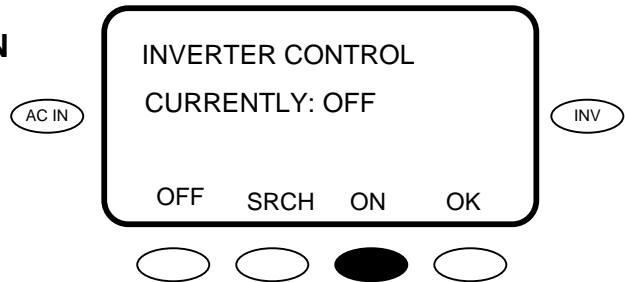

3. To turn inverter OFF, press button under OFF.

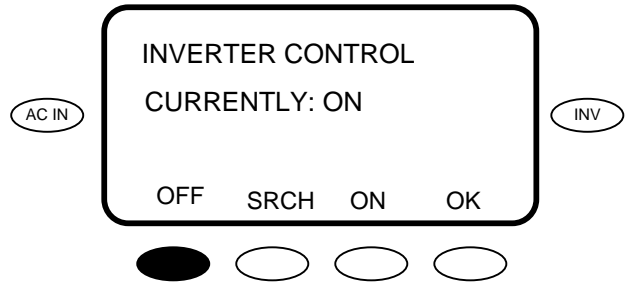

INVERTER ON/OFF

NOTES:

1. If the inverter indicates an error condition, note the error description. Try to correct the error then turn inverter Off and back On to reset the error condition.
2. The Search function is rarely recommended. If you see Search is on, select On instead.
3. Pressing the button under OK will take you back to where you were previously.