


To access generator control: Press GENERATOR button

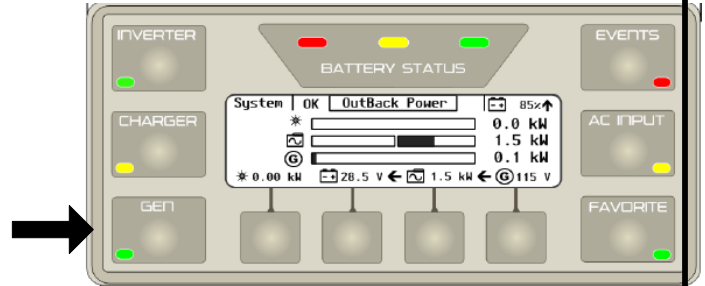


To turn generator off: Press the button under "Off."

To turn generator on: Press the button under "ON."

To put generator in Automatic mode: Press the button under "Auto."

To RESET the generator control:

- Press the button Under "Off."
- Put the generator in the mode you want, usually AUTO.

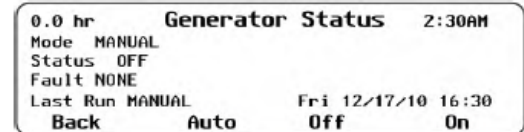

Note: If "AGSERR" is ever seen on the screen, turn Generator Start Control "Off" and find out why generator failed to start. It may be low fuel supply, low engine oil level or dead cranking battery.