



This is the Mate. It is used to control the solar equipment:

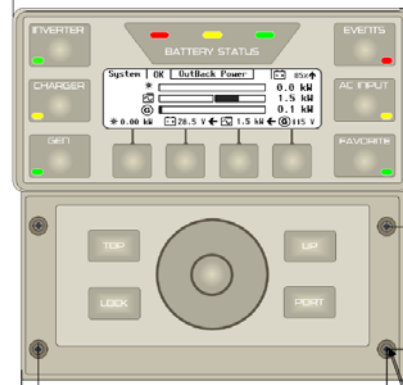

To access Inverter On/Off Control:
 Press INV button.

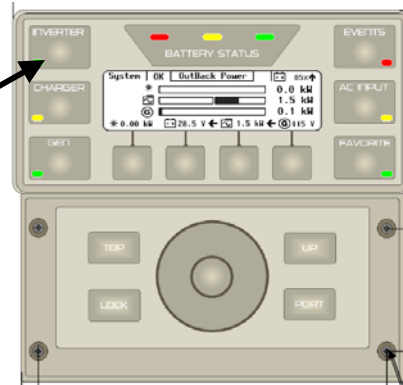

You will see this screen:



Inverter Status			
Mode	ON	Battery	28.5 V
Input	115 VAC	1.5 kW	
Output	115 VAC	0.0 kW	Load 0.0 kW
Back	On	Off	Search



To turn Inverter off: Press the button under "Off."

To turn inverter on: Press the button under "ON."

Avoid pressing the Search button unless instructed to do so.

The Back button takes you back to the previous screen.

If the inverter experiences a problem: It may shut itself down. Sometimes turning the inverter Off and then back On will restore power. You might disconnect any power feeds first and then reconnect one at a time. This can be done by turning off all circuit breakers in a home breaker panel, for example.