




SW Control Panel: Here is the control panel for the SW inverter. The parts are labeled.

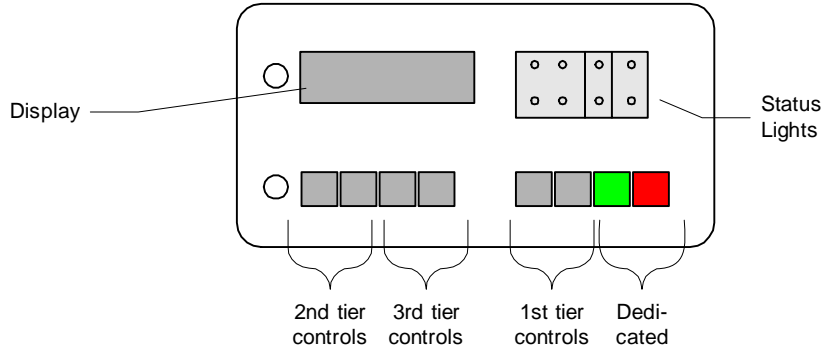


Status LEDs: Labeled here are the status LEDs and a brief description of what they mean.

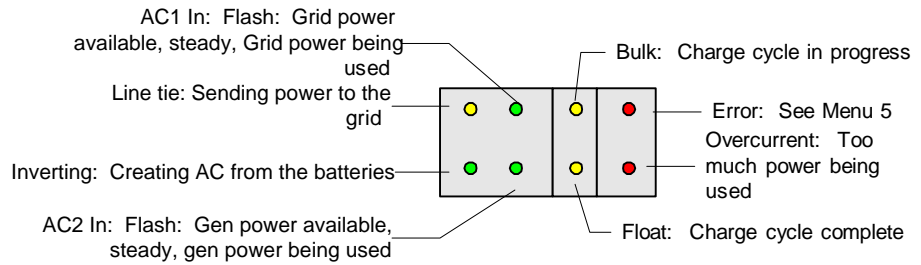

Menu Structure: The 1st, 2nd and 3rd tier buttons navigate through a menu structure. 1st tier takes you to Menu Headings. 2nd tier moves within a heading. 3rd tier makes adjustments if available. Dedicated buttons take you directly to Generator and Inverter menus.

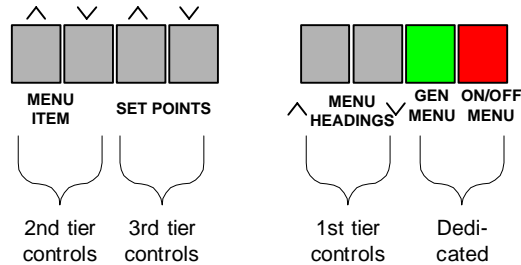

ON/OFF MENU: Press the **Red** button to go to the On/Off menu. Press the Set Point right or left button to move the underline under your choice.

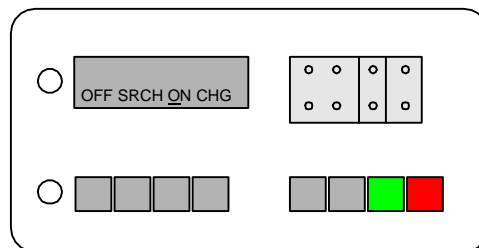

GENERATOR CONTROL: Press the **Green** button to go to the Generator Mode menu. Press the Set Point right or left button to move the underline under your choice. If you choose On, the generator will run until you choose Off. Auto is for automatic start under set conditions.

